



# ASUS Eee PC 1018P Battery Replacement

Swap out an old battery that either won't take or won't keep a charge like it used to.

Written By: Daniel Rodman





## Step 1 — Battery



- Lay the laptop flat on a hard surface with the bottom facing up and the battery pack on the side closest to you.

## Step 2



- Use both index fingers to push both spring tabs inwards towards the center of the laptop.

## Step 3



- With the spring tabs pressed inward, use your fingernails to lift of the edge of the battery, pivoting it up and towards you.
- Pull the battery pack up and away from you to completely free it from its recess in the case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 08:46:01 AM.